

Honeywell

Installation Guide

FocusPRO® TH6000 Series

Programmable Thermostat

This manual covers the following models

- TH6110D: For 1 Heat/1 Cool systems
- TH6220D: For up to 2 Heat/2 Cool systems
- TH6320U: For up to 3 Heat/2 Cool systems

(Remove battery holder to find model number)

System Types


- Gas, oil, or electric heat with air conditioning
- Warm air, hot water, high-efficiency furnaces, heat pumps, steam, gravity
- Heat only — two-wire systems, three-wire zone valves (Series 20), and normally open zone valves
- Heat only with fan
- Cool only
- 750 mV heating systems

Must be installed by a trained, experienced technician

Read these instructions carefully. Failure to follow these instructions can damage the product or cause a hazardous condition.

Need Help?

For assistance with this product please visit <http://customer.honeywell.com> or call Honeywell Customer Care toll-free at 1-800-468-1502

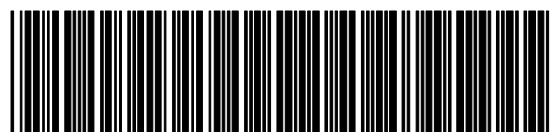


Wallplate installation


1. Separate wallplate from thermostat.
2. Mount wallplate as shown below.




It's easier to grasp the wallplate and remove it after completely removing the battery holder.

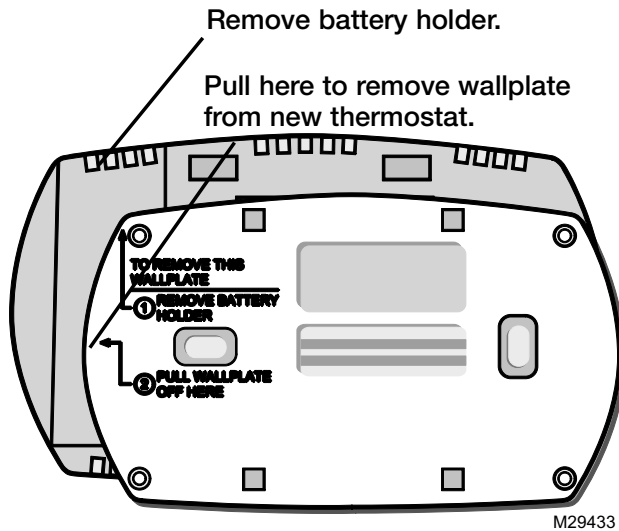

Insert reference card after wallplate is mounted (see instructions, below).

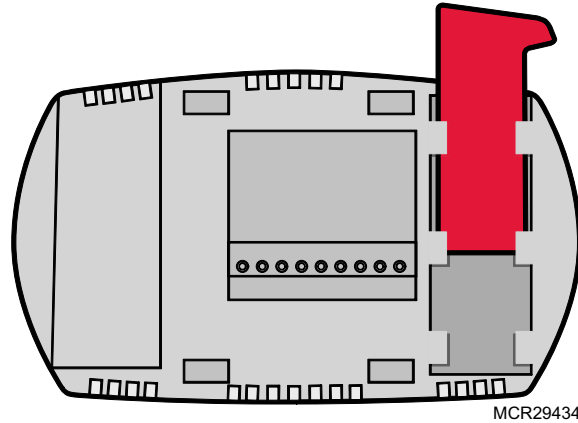

Drill 3/16" holes for drywall. Drill 7/32" holes for plaster.

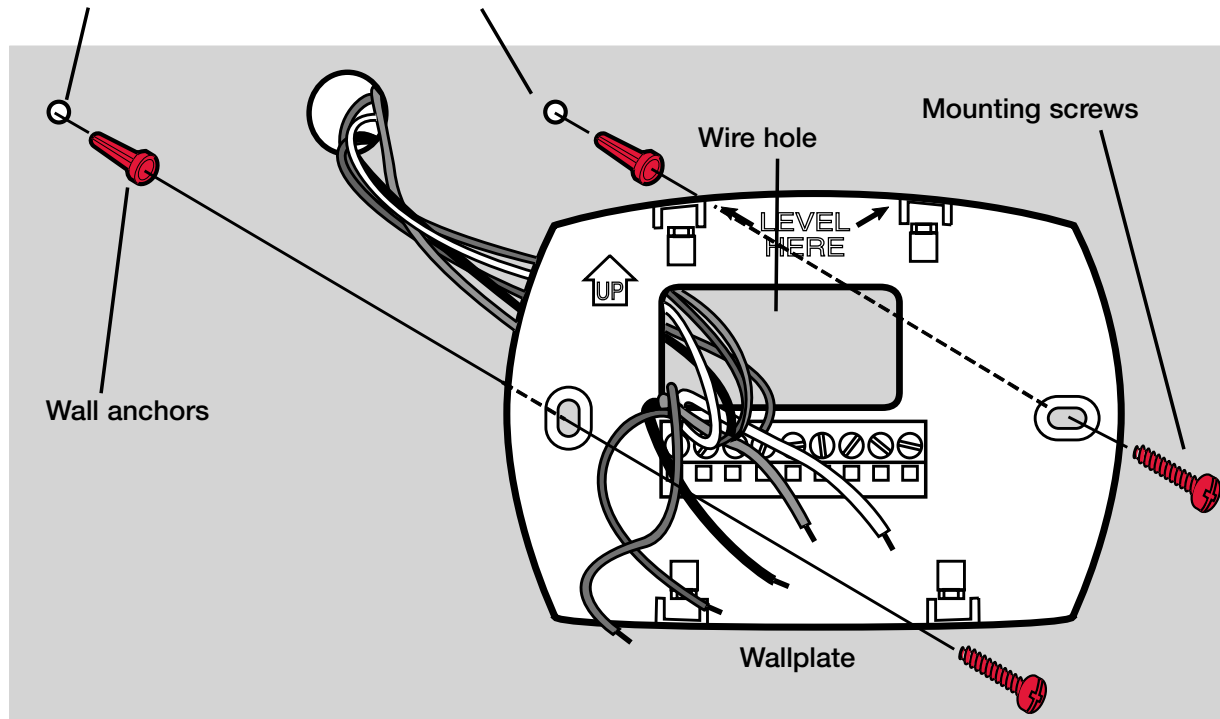

ENGLISH



CAUTION: ELECTRICAL HAZARD


Can cause electrical shock or equipment damage. Disconnect power before beginning installation.



MERCURY NOTICE

If this product is replacing a control that contains mercury in a sealed tube, do not place the old control in the trash. Contact your local waste management authority for instructions regarding recycling and proper disposal.

Power options

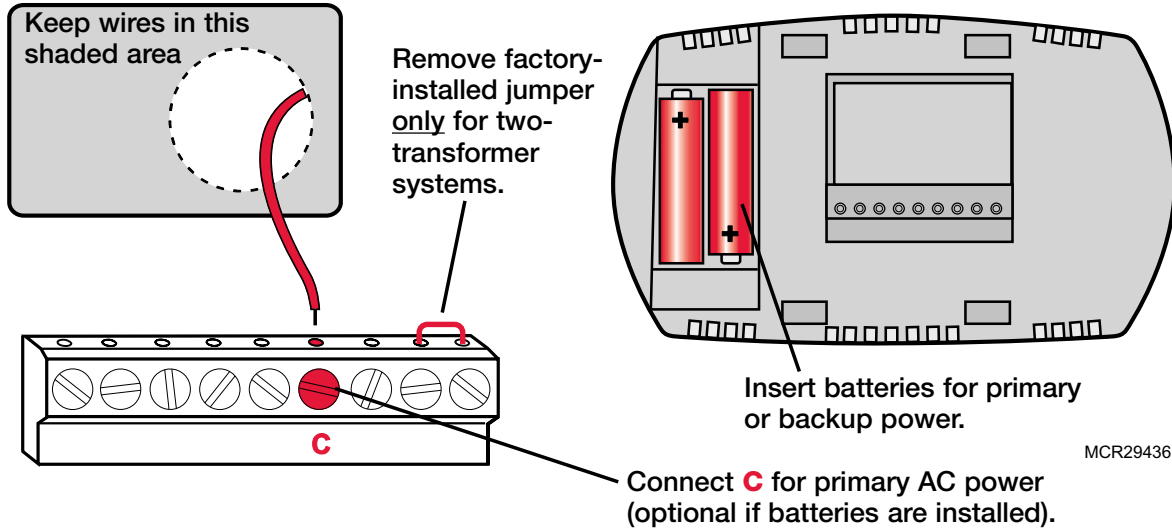

Wiring

Terminal designations

Shaded areas below apply only to **TH6320U/TH6220D** or as otherwise noted.

Conventional Terminals:

- Rc** 24VAC power from cooling transformer
- R** 24VAC power from heating transformer
- W** Heat relay (stage 1)
- W2** Heat relay (stage 2)
- Y** Compressor contactor (stage 1)
- Y2** Compressor contactor (stage 2)
- G** Fan relay
- C** 24VAC common. For 2 transformer systems, use common wire from cooling transformer.

Heat Pump Terminals:

- Rc** 24VAC power from cooling transformer
- R** 24VAC power from heating transformer
- O/B** Changeover valve
- Y** Compressor contactor (stage 1)
- Y2** Compressor contactor (stage 2) -**TH6320U** only
- G** Fan relay
- Aux** Auxiliary heat relay*
- E** Emergency heat relay*
- L** Sends output when set to Em. Heat
- C** 24VAC common

TH6110D



TH6220D



TH6320U



TH6110D



TH6220D



TH6320U



*Aux and E terminals combined on **TH6320U** only.

ENGLISH

Wiring

Wiring guide — conventional systems

Shaded areas below apply only to **TH6320U/TH6220D** or as otherwise noted.

1H/1C System (1 transformer)




Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor
C	24VAC common [3]
W	Heat relay
G	Fan relay

Heat-only System with Fan




Rc	Power [1]
R	[R+Rc joined by jumper]
C	24VAC common [3]
W	Heat relay
G	Fan relay

Heat-only System



Rc	Power [1]
R	[R+Rc joined by jumper]
C	24VAC common [3]
W	Heat relay


Cool-only System



Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor
C	24VAC common [3]
G	Fan relay

Heat-only System


(Series 20) [5]



Rc	[R+Rc joined by jumper]
R	Series 20 valve terminal "R" [1]
Y	Series 20 valve terminal "W"
C	24VAC common [3]
W	Series 20 valve terminal "B"

2H/2C System


(1 transformer) [6]



Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor (stage 1)
C	24VAC common [3]
W	Heat relay (stage 1)
G	Fan relay
W2	Heat relay (stage 2)
Y2	Compressor contactor (stage 2)

Heat-only System

(normally open zone valve) [5]



Rc	[R+Rc joined by jumper]
R	Power [1]
Y	Normally open zone valve
C	24VAC common [3]

2H/2C System

(2 transformers) [6]



Rc	Power (cooling transformer) [1, 2]
R	Power (heating transformer) [1, 2]
Y	Compressor contactor (stage 1)
C	24VAC common [3, 4]
W	Heat relay (stage 1)
G	Fan relay
W2	Heat relay (stage 2)
Y2	Compressor contactor (stage 2)

1H/1C System

(2 transformers)



Rc	Power (cooling transformer) [1, 2]
R	Power (heating transformer) [1, 2]
Y	Compressor contactor
C	24VAC common [3, 4]
W	Heat relay
G	Fan relay

ENGLISH

See [notes] below

NOTES

Wire specifications:

Use 18- to 22-gauge thermostat wire.
Shielded cable is not required.

- [1] Power supply. Provide disconnect means and overload protection as required.
- [2] Remove jumper for 2-transformer systems.
- [3] Optional 24VAC common connection.
- [4] Common connection must come from cooling transformer.
- [5] In Installer Setup, set system type to Heat Only.
- [6] In Installer Setup, set system type to 2Heat/2Cool Conventional.

- [7] In Installer Setup, set changeover valve to O or B.
- [8] In Installer Setup, set system type to 2Heat/1Cool Heat Pump.
- [9] In Installer Setup, set system type to 2Heat/2Cool Heat Pump.
- [10] In Installer Setup, set system type to 3Heat/2Cool Heat Pump.
- [11] L terminal sends a continuous output when thermostat is set to Em. Heat. Connect to Honeywell zoning panels to switch the panel to Emergency Heat.
- [12] Install field jumper between Aux and E if there is no emergency heat relay.

Wiring

Wiring guide — heat pump systems

Shaded areas below apply only to **TH6320U/TH6220D** or as otherwise noted.

1H/1C Heat Pump System



Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor
C	24VAC common [3]
O/B	Changeover valve [7]
G	Fan relay

2H/1C Heat Pump System

(TH6220D only) [8]



Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor
C	24VAC common [3]
O/B	Changeover valve [7]
G	Fan relay
Aux	Auxiliary heat relay [12]
E	Emergency heat relay [12]
L	Sends output when set to Em. Heat [11]

2H/1C Heat Pump System


(TH6320U only) [8]



Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor
C	24VAC common [3]
O/B	Changeover valve [7]
G	Fan relay
Aux/E	Auxiliary/Emergency heat relay
L	Sends output when set to Em. Heat [11]

2H/2C Heat Pump System


(TH6320U only) [9]



Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor (stage 1)
C	24 VAC common [3]
O/B	Changeover valve [7]
G	Fan relay
Y2	Compressor contactor (stage 2)
L	Sends output when set to Em. Heat [11]

3H/2C Heat Pump System

(TH6320U only) [10]



Rc	Power [1]
R	[R+Rc joined by jumper]
Y	Compressor contactor (stage 1)
C	24VAC common [3]
O/B	Changeover valve [7]
G	Fan relay
Aux/E	Auxiliary/Emergency heat relay
Y2	Compressor contactor (stage 2)
L	Sends output when set to Em. Heat [11]


See [notes] on page 4.

Thermostat mounting

Align the 4 tabs on the wallplate with slots on the back of the thermostat, then push gently until the thermostat snaps in place.

Push excess wire back into the wall opening.


Plug wall opening with non-flammable insulation.

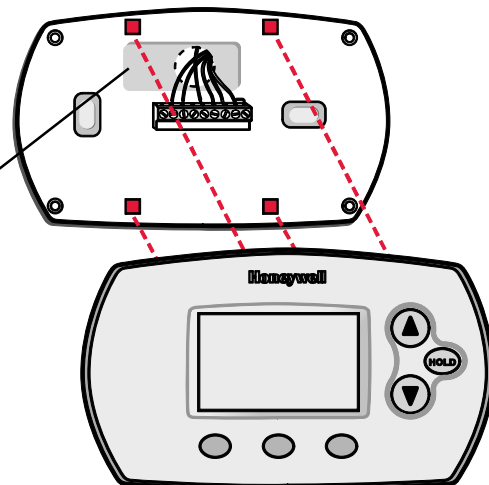

MCR29453

Installer setup

Follow the procedure below to configure the thermostat to match the installed heating/cooling system, and customize feature operation as desired.

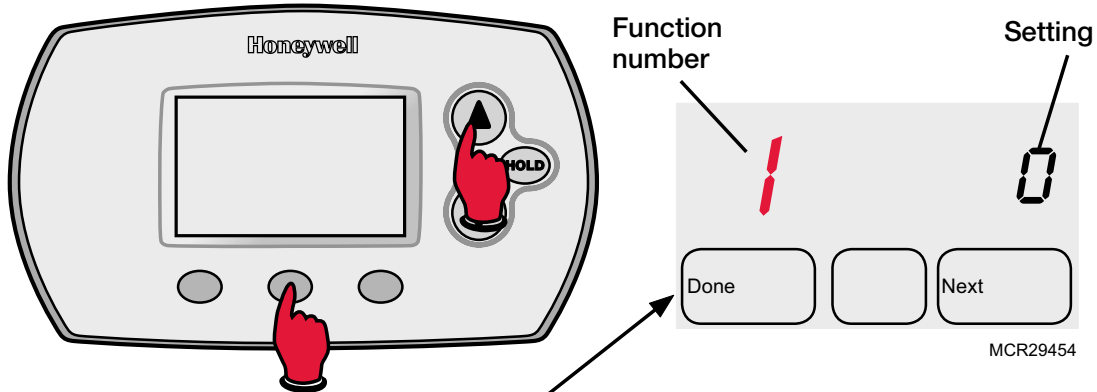

To begin, press and hold the ▲ and FAN buttons until the display changes.

Press ▲ or ▼ to change settings.
Press NEXT to advance to the next function.
Press DONE to exit and save settings.

Setup function Settings & options (factory default in bold)

Shaded areas below apply only to **TH6320U/TH6220D** or as otherwise noted.

1 System type	0 1 heat/1 cool conventional 1 1 heat/1 cool heat pump (no aux. heat) 2 Heat only — 2-wire systems, 3-wire zone valves (Series 20), and normally open zone valves 3 Heat only with fan 4 Cool only 5 2 heat/1 cool heat pump (with aux. heat) 6 2 heat/2 cool conventional 7 2 heat/1 cool conventional 8 1 heat/2 cool conventional 9 2 heat/2 cool heat pump (no aux. heat) - TH6320U only 10 3 heat/2 cool heat pump (with aux. heat) - TH6320U only
2 Changeover valve (O/B terminal)	0 Changeover valve (O/B terminal energized in cooling) 1 Changeover valve (O/B terminal energized in heating)
3 Fan control (heating)	0 Gas or oil furnace — equipment controls fan in heating 1 Electric furnace — thermostat controls fan in heating
5 Stage 1 heat cycle rate (CPH: cycles/hour)*	5 For gas or oil furnaces of less than 90% efficiency For steam or gravity systems 3 For hot water systems & <u>furnaces of over 90% efficiency</u> 9 For electric furnaces
6 Stage 2 heat cycle rate/Auxiliary heat cycle rate (CPH)*	5 For gas or oil furnaces of less than 90% efficiency 1 For steam or gravity systems 3 For hot water systems & <u>furnaces of over 90% efficiency</u> 9 For electric furnaces
7 Auxiliary heat cycle rate (CPH)*	5 For gas or oil furnaces of less than 90% efficiency 1 For steam or gravity systems 3 For hot water systems & <u>furnaces of over 90% efficiency</u> 9 For electric furnaces
Only TH6320U for 3H/2C Heat Pumps	
8 Emergency heat cycle rate (CPH)*	9 For electric emergency heat 1 For steam or gravity systems 3 For hot water systems & <u>furnaces of over 90% efficiency</u> 5 For gas or oil furnaces of less than 90% efficiency

*[Other cycle rate options: 2, 4, 6, 7, 8, 10, 11 or 12 CPH]


Installer setup

Setup function Settings & options (factory default in bold)

Shaded areas below apply only to **TH6320U/TH6220D** or as otherwise noted.

9 Stage 1 compressor cycle rate (CPH)	3 Recommended for most compressors [Other cycle rate options: 1, 2, 4, 5 or 6 CPH]
10 Stage 2 compressor cycle rate (CPH)	3 Recommended for most compressors [Other cycle rate options: 1, 2, 4, 5 or 6 CPH]
12 Manual/Auto changeover	0 Manual changeover (Heat/Cool/Off) 1 Auto changeover (Heat/Cool/Auto/Off) **See page 8 2 Auto changeover only (Auto) **See page 8
13 Adaptive Intelligent Recovery™	1 On**See page 8 0 Off
14 Temperature display	0 Fahrenheit 1 Celsius
15 Compressor protection	5 Five-minute compressor off time **See page 8 [Other options: 0, 1, 2, 3 or 4-minute off time]
16 Schedule format	0 5/2 (programmable weekdays and weekends) 1 5/1/1 (weekdays, Saturday & Sunday programmable)
27 Heat temperature range stops	90 Max. heat temperature setting is 90° F (32° C) [Other options: 40 °F to 89 °F (4.5 °C to 31.5 °C)]
28 Cool temperature range stops	50 Min. cool temperature setting is 50° F (10° C) [Other options: 51 °F to 99 °F (10.5 °C to 37 °C)]

Installer system test

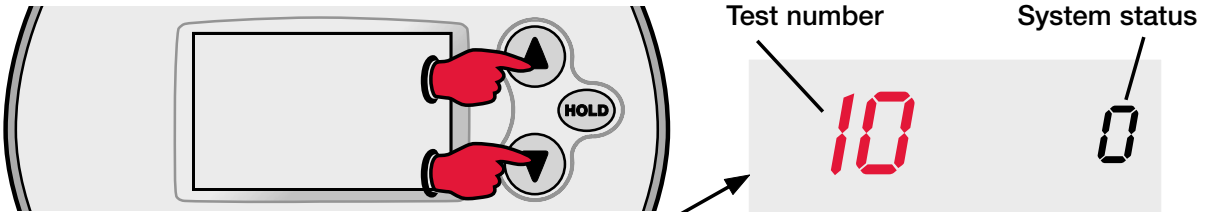

To begin, press and hold the ▲ and ▼ buttons until the display changes.

Test number System status

10 0

MCR29455

Press ▲ / ▼ to turn system on/off.
Press NEXT to advance to next test.
Press DONE to terminate system test.

System test System status

Shaded areas below apply only to **TH6320U/TH6220D** or as otherwise noted.

10 Heating system	0 Heat and fan turn off.
	1 Stage 1 heat turns on. Fan turns on if Setup Function 1 is set to 1, 5, 9 or 10 OR Setup Function 3 is set to 1 **See page 6
	2 Stage 2 heat turns on
	3 Stage 3 heat turns on - TH6320U only
20 Emergency heating system	0 Heat and fan turn off
	1 Heat and fan turn on
	2 Stage 2 heat turns on (auxiliary heat) - TH6220D only
30 Cooling system	0 Compressor and fan turn off
	1 Compressor and fan turn on
	2 Stage 2 compressor turns on
40 Fan system	0 Fan turns off
	1 Fan turns on



CAUTION: Compressor protection is bypassed during testing. To prevent equipment damage, avoid cycling the compressor quickly.

Special functions

Auto Changeover (Setup Function 12): When set to Auto, the thermostat automatically selects heating or cooling depending on the indoor temperature. The thermostat will automatically adjust heat and cool settings to maintain a 3-degree separation (fixed). **Note:** If you select Auto Changeover Only, the System Setting on the thermostat will stay locked in the Auto position, preventing the user from changing it to Em Heat, Heat, Cool or Off.

Adaptive Intelligent Recovery™ (Setup Function 13): Allows the thermostat to “learn” how long the furnace and air conditioner take to reach programmed temperature settings, so the temperature is reached at the scheduled time.

Compressor Protection (Setup Function 15): Forces the compressor to wait a few minutes before restarting, to prevent damage. During the wait time, the message Cool On or Heat On (heat pumps only) will flash on the display.

Accessories & replacement parts

Please contact your distributor to order replacement parts.

Battery holder.....Part Number 50007072-001

Cover plate assembly*.....Part Number 50002883-001

12 pack of medium cover plates*.....Part Number 50007298-001

*Use to cover marks left by old thermostats.

Specifications

Temperature Ranges

- Heat: 40° to 90°F (4.5° to 32°C)
- Cool: 50° to 99°F (10° to 37°C)

Operating Ambient Temperature

- 32° to 120°F (0° to 48.9°C)

Shipping Temperature

- -20° to 120°F (-28.9° to 48.9°C)

Operating Relative Humidity

- 5% to 90% (non-condensing)

Physical Dimensions

- 3-9/16" H x 5-13/16" W x 1-1/2" D
91 mm H x 147 mm W x 38 mm D

Electrical Ratings

Terminal	Voltage (50/60Hz)	Running Current
W Heating (Powerpile)	20-30 Vac 750 mV DC	0.02-1.0 A 100 mA DC
W2 (Aux) Heating	20-30 Vac	0.02-0.5 A
Y Cooling	20-30 Vac	0.02-1.0 A
Y2 Cooling	20-30 Vac	0.02-1.0 A
G Fan	20-30 Vac	0.02-0.5 A
O/B Changeover	20-30 Vac	0.02-0.5 A
E Emergency heat	20-30 Vac	0.02-1.0 A
L Output	20-30 Vac	0.02-0.5 A

Automation and Control Solutions

Honeywell International Inc.

1985 Douglas Drive North

Golden Valley, MN 55422

<http://customer.honeywell.com>

Honeywell Limited-Honeywell Limitée

35 Dynamic Drive

Toronto, Ontario M1V 4Z9



Printed in U.S.A. on recycled paper containing at least 10% post-consumer paper fibers.

Honeywell

© U.S. Registered Trademark.

© 2009 Honeywell International Inc.
69-1920EFS—01 M.S. 05-09